


# Взрыв-схема ленточнопильного станка JWBS-14DS

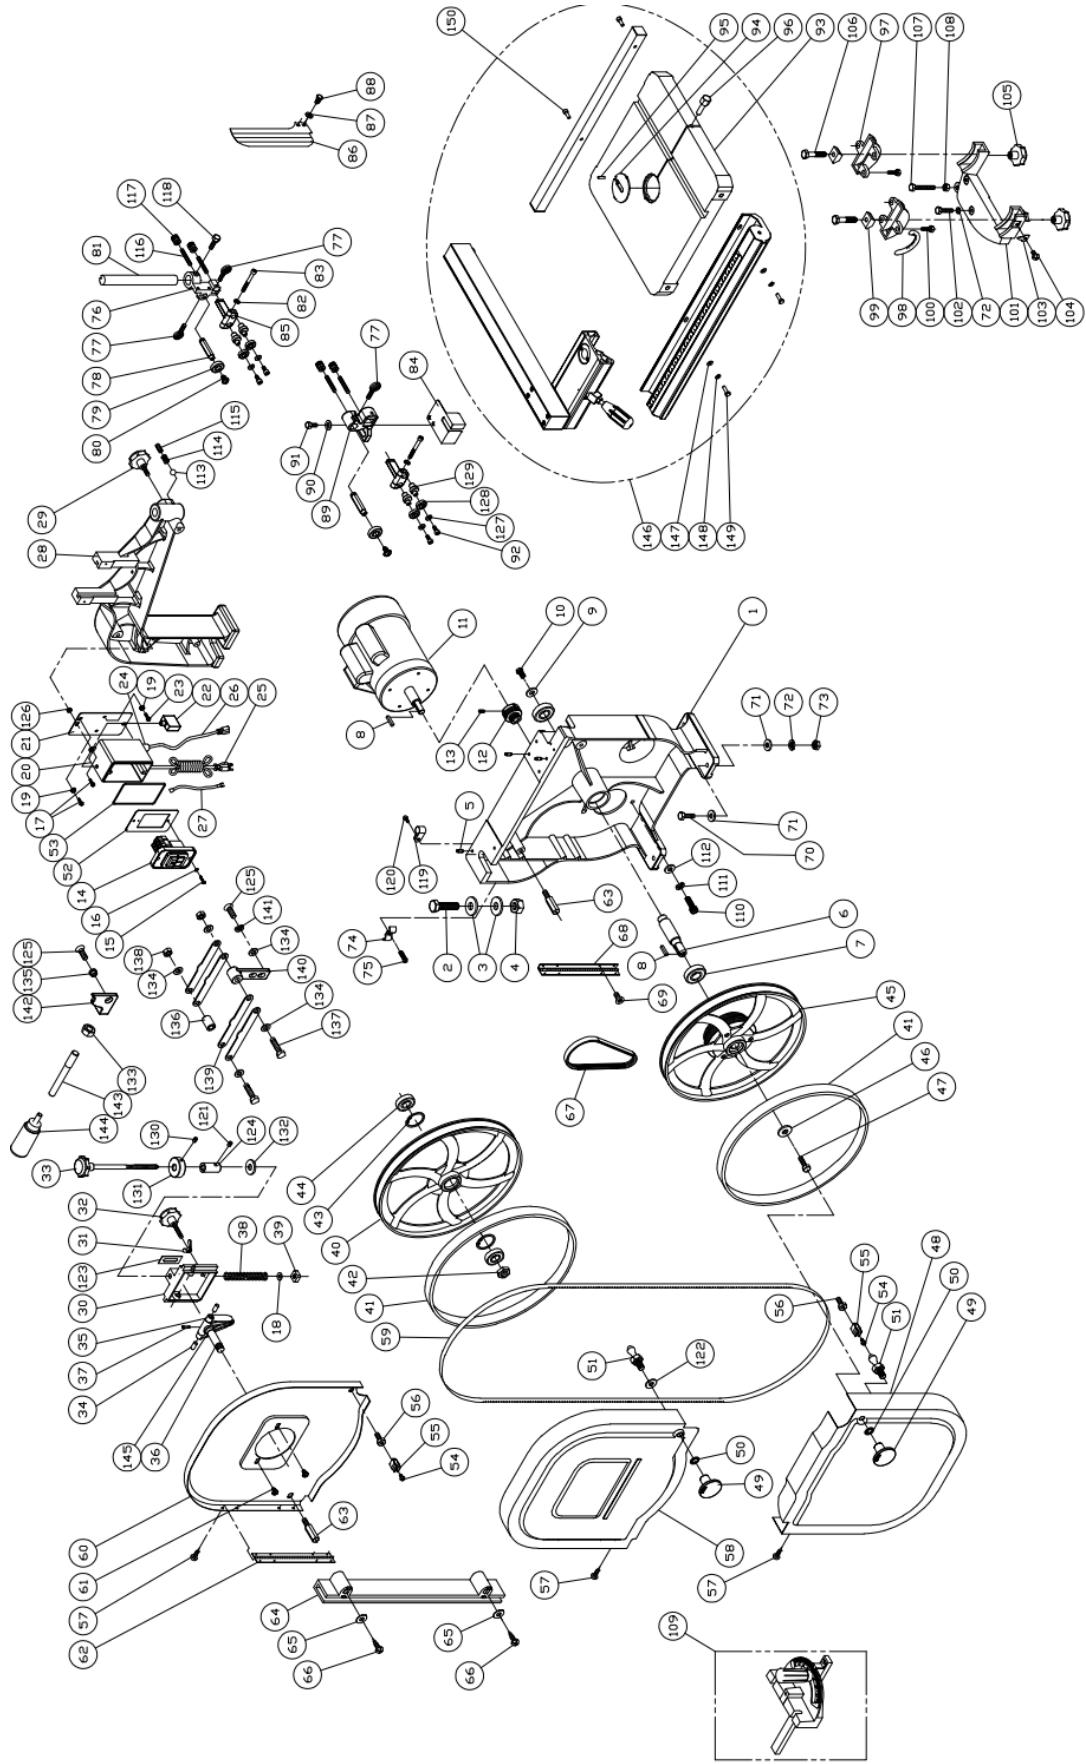


## Детализировка ленточнопильного станка JWBS-14DS

Index No.	Part No.	Description	Size	Qty
1	JWBS14DS-01	Base		1
2	990180	Hex Cap Screw	M16x55	1
3	WF164030	Flat Washer	M16xØ40	2
4	TS-154010	Hex Nut	M16	1
5	150031	Pin		4
6	JWBS14DS-06	Lower Wheel Shaft		1
7	BB620403	Ball Bearing	6204LLU	2
8	KD050525	Key	5x5x25	2
9	TS-1550061	Flat Washer	M8xØ30	1
10	TS-2248162	Socket Head Button Screw	M8x16	1
11	JWBS14DS-11	Motor	0.75kW, 1PH, 230V	1
	JWBS14DS-11-SC	Start Capacitor (not shown)	300/125µF	1
	JWBS14DS-11-RC	Running Capacitor (not shown)	30/250µF	1
	JWBS14DS-11-CC	Capacitor Cover (not shown)		2
	JWBS14DS-11-CSS	Centrifugal Switch Set (not shown)		1
	JWBS14DS-11-MFC	Motor Fan Cover (not shown)		1
12	JWBS14DS-12	Motor Pulley		1
13	TS-1523041	Socket Set Screw	M6x12	2
14	170239B	On/Off NVR Switch	KJD-12	1
15	ST039304	Tapping Screw	M3.5x12(AB)	2
16	TS-1550021	Flat Washer	M4xØ8	2
17	TS-1533052	Pan Head Machine Screw	M5x16 (+)	2
18	150260	Indicator	Red	1
19	WE050000	Star Washer (External)	M5	2
20	523028U	Switch Box		1
21	150153	Switch Support Plate		1
22	994661	Overload Protector	7A	1
23	SP059100	Pan Head Machine Screw	M5x6	2
24	998654	Strain Relief		2
25	IC100001	Power Cord with VDE Plug	VDE 1.0 mm <sup>2</sup> x3C	1
26	IM130003	Motor Cord	VDE 1.0 mm <sup>2</sup> x3C	1
27	IC290008	Connecting Line		1
28	JWBS14DS-28	Upper Frame Arm		1
29	100204	Lock Knob		1
30	100016J	Upper Wheel Sliding Bracket		1
31	NW080000	Wing Nut	M8	1
32	990652	Lock Knob	M8x55	1
33	AB150125	Blade Tension Adjusting Screw Set		1
	150025	Knob		1
	150125	Adjusting Screw Rod		1
	PS031800	Spring Pin	Ø3x18	1
34	100021	Steel Pin		2
35	150117	Upper Wheel Shaft Hinge		1
36	150138	Upper Wheel Shaft		1
37	PS042400	Spring Pin	Ø4x24	1
39	150090	Square Nut	M10	1
40	JWBS14DS-40	Upper Wheel	14"	1
41	100025	Wheel Tire		2
42	TS-1540083	Hex Nut	M12x1.25	1
43	RR350000	Retaining Ring	R35	2
44	BB620203	Ball Bearing	6202LLU	2

45.....	AB100158.....	Lower Wheel Assembly* .....	1	
46.....	TS-1550061 .....	Flat Washer.....	M8xØ30.....1	
47.....	SH080402.....	Hex Cap Screw (Left Helix).....	M8x20(LH).....1	
48.....	JWBS14DS-48 .....	Lower Wheel Door .....	1	
49.....	170493.....	Catch Knob .....	M8 .....	2
50.....	WI080000 .....	Start Washer .....	2	
51.....	170080.....	Stud Latch .....	2	
52.....	150261.....	Switch Plate .....	1	
53.....	150262.....	O Ring.....	1	
54.....	TS-1533042.....	Pan Head Machine Screw.....	M5x12 (+).....2	
55.....	150079.....	Catch .....	2	
56.....	150054.....	Location Screw.....	2	
57.....	ST049200 .....	Tapping Screw .....	M8x8.....12	
58.....	JWBS14DS-58 .....	Upper Wheel Door .....	1	
59.....	170368.....	Saw Blade .....	6TPI 93-1/2"x3/8" .....	1
60.....	JWBS14DS-60 .....	Inner Wheel Cover .....	1	
61.....	SF059200 .....	Pan Head Machine Screw w/Flange.....	M5x8.....2	
62.....	150901.....	Upper Hinge .....	1	
63.....	150066.....	STUD .....	2	
64.....	150070.....	Saw Blade Guard.....	1	
65.....	150097.....	Gasket Washer .....	2	
66.....	ST039404 .....	Tapping Screw .....	M3.5x16(AB) .....	2
67.....	JWBS14DS-67 .....	Poly-V Belt .....	2000J5.....1	
68.....	150902.....	Lower Hinge .....	1	
69.....	SN050200.....	Round Head Machine Screw .....	M5x10 (+).....4	
70.....	TS-1504071 .....	Socket Head Button Screw .....	M8x35.....4	
71.....	TS-1550061 .....	Flat Washer.....	M8xØ18.....8	
72.....	TS-2361081 .....	Lock Washer .....	M8 .....	6
73.....	TS-1540061 .....	Hex Nut .....	M8 .....	4
74.....	523024.....	Cord Clamp .....	1	
75.....	SP059200.....	Pan Head Machine Screw.....	M5x8 (+).....1	
76.....	141076.....	Upper Support Bracket Post .....	1	
77.....	150013.....	Thumb Screw .....	M6x16.....4	
78.....	150015.....	Upper Spacing Sleeve .....	2	
79.....	BB600002A .....	Ball Bearing.....	6000ZZ.....2	
80.....	990908.....	Pan Head Machine Screw w/Flange.....	M6x8.....2	
81.....	150007.....	Guide Post .....	1	
82.....	TS-1551031 .....	Lock Washer .....	M5 .....	2
83.....	TS-1502091 .....	Socket Head Cap Screw .....	M5x40.....2	
84.....	150101.....	Lower Saw Blade Guard .....	1	
85.....	150207.....	Support Bracket .....	2	
86.....	100002X4 .....	Upper Saw Blade Guard (L).....	1	
87.....	TS-1550041 .....	Flat Washer.....	M6xØ13.....2	
88.....	TS-1482011 .....	Hex Cap Screw .....	M6x10.....2	
89.....	150206.....	Lower Support Bracket Post .....	1	
90.....	TS-1550041 .....	Flat Washer.....	M6xØ13.....2	
91.....	TS-1482041 .....	Hex Cap Screw .....	M6x20.....2	
92.....	TS-1502031 .....	Socket Head Cap Screw .....	M5x12.....4	
93.....	JWBS14DS-93 .....	Work Table.....	14"x14" .....	1
94.....	199037.....	Table Insert .....	Aluminum .....	1
95.....	992311.....	Spring Pin.....	Ø3x8.....1	
96.....	100038.....	Table Pin .....	1	
97.....	100042.....	Table Trunnion .....	2	
98.....	100051.....	Scale .....	1	

99.....	100041.....	Trunnion Clamp Shoe .....	2	
100.....	TS-1482021 .....	Hex Cap Screw .....	M6x12.....6	
101.....	110045.....	Trunnion Support Bracket .....	1	
102.....	TS-1490051 .....	Hex Cap Screw .....	M8x30.....2	
103.....	110049.....	Pointer.....	1	
104.....	SF059100 .....	Pan Head Machine Screw w/Flange .....	M5x6.....1	
105.....	150045.....	Lock Knob .....	M10 .....	2
106.....	TS-1491081 .....	Hex Cap Screw .....	M10x50.....2	
107.....	TS-1490151 .....	Hex Cap Screw .....	1	
108.....	TS-1540061 .....	Hex Nut .....	M8 .....	1
109.....	AB100184.....	Miter Gauge Assembly* .....	1	
110.....	TS-1504051 .....	Socket Head Cap Screw .....	M8x25.....2	
111.....	TS-2361081 .....	Lock Washer .....	M8 .....	2
112.....	TS-1550061 .....	Flat Washer.....	M8xØ30.....2	
113.....	994181.....	Steel Ball.....	1	
114.....	150099.....	Spring.....	1	
115.....	TS-1525011 .....	Socket Set Screw .....	M10x10.....1	
116.....	SS080701 .....	Socket Set Screw .....	M8x1.0x35.....1	
117.....	150010.....	Adjusting Nut.....	4	
118.....	TS-1482031 .....	Hex Cap Screw .....	M6x16.....1	
119.....	998626.....	Cord Clamp .....	1	
120.....	TS-1533042 .....	Pan Head Machine Screw.....	M5x12.....1	
121.....	TS-1522011 .....	Socket Set Screw.....	M5x5 (+).....1	
122.....	WF081830 .....	Flat Washer.....	M8xØ18x3mm.....1	
123.....	LM001716.....	Tension Scale .....	1	
124.....	130044.....	Lower Lock Collar .....	1	
125.....	SJ080400 .....	Pan Head Socket Screw .....	M8x20.....1	
126.....	JWBS14OS-1121 .....	Spring Nut .....	M4 .....	2
127.....	TS-1550031 .....	Flat Washer.....	M5xØ12.....4	
128.....	BB608002A .....	Ball Bearing.....	608ZZ.....4	
129.....	150213.....	Eccentric Shaft.....	4	
130.....	TS-1522031 .....	Socket Set Screw .....	M5x10.....1	
131.....	100174.....	Upper Lock Collar .....	1	
132.....	TS-1550071 .....	Flat Washer.....	M10xØ20.....1	
133.....	TS-2342121 .....	Hex Nut .....	M12 .....	1
134.....	TS-1550061 .....	Flat Washer.....	M8xØ18.....6	
135.....	100176.....	Bushing.....	1	
136.....	100177.....	Spacer.....	1	
137.....	TS-1490071 .....	Hex Cap Screw .....	M8x40.....2	
138.....	TS-1541031 .....	Nylon Nut .....	M8 .....	2
139.....	100178.....	Support Plate .....	2	
140.....	100179.....	Pivot Arm.....	1	
141.....	TS-2361081 .....	Lock Washer .....	M8 .....	2
142.....	100182.....	Tension Lever .....	1	
143.....	100183.....	Tension Lever Rod.....	1	
144.....	100234.....	Tension Lever Knob.....	M8 .....	1
145.....	150119.....	Screw Ring.....	1	
146.....	QF198008G.....	Rip Fence Assembly (not include Table) .....	1	
147.....	TS-1550061 .....	Flat Washer.....	M8x13x1.0t.....2	
148.....	TS-2361061 .....	Lock Washer .....	M6 .....	2
149.....	TS-1482041 .....	Hex Cap Screw .....	M6x20.....2	
150.....	TS-1503041 .....	Socket Head Cap Screw.....	M6x16.....2	


## Взрыв-схема нижнего шкива станка JWBS-14DS

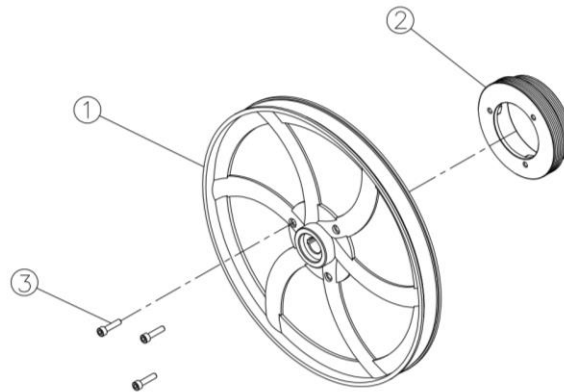

## Детализировка нижнего шкива станка JWBS-14DS

Index No.	Part No.	Description	Size	Qty
.....	AB100158.....	Lower Wheel Assembly (#1 thru 3).....		1
1.....	100158.....	Lower Wheel.....		1
2.....	100159.....	Belt Pulley.....	M8.....	1
3.....	TS-1503061.....	Socket Head Cap Screw.....	M6x25.....	3


## Взрыв-схема углового упора станка JWBS-14DS

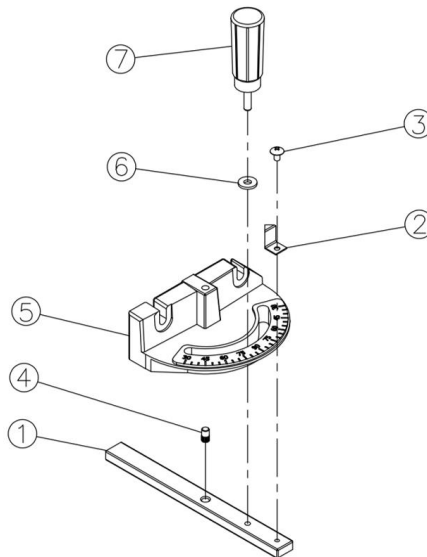

## Детализировка углового упора станка JWBS-14DS

Index No	Part No	Description	Size	Qty
.....	AB100184.....	Miter Gauge Assembly (#1 thru 7).....		1
1.....	100184.....	Guide Bar.....		1
2.....	JWBS15-1122-704.....	Pointer.....		1
3.....	PWBS14-251-5.....	Pan Head Flanged Screw.....	M5x8.....	1
4.....	JWBS15-1122-706.....	Steel Pin.....	Ø6x10mm.....	1
5.....	JWBS15-1122-707.....	Miter Gauge Body.....		1
6.....	JWBS15-1122-708.....	Nylon Washer.....		1
7.....	JWBS15-1122-709.....	Handle.....		1


## Взрыв-схема параллельного упора станка JWBS-14DS

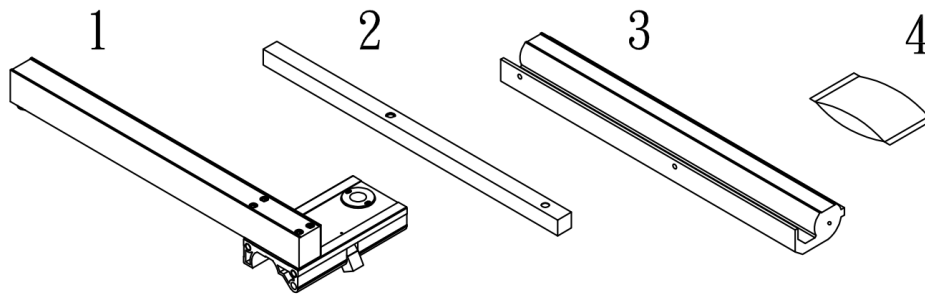

### Детализировка параллельного упора станка JWBS-14DS


Index No	Part No	Description	Size	Qty
.....	QF198008G	Rip Fence Assembly (#1 thru 4)	.....	.....
1.....	AA198002	Rip Fence main set	.....	1
2.....	AA198011	Real Rail	L=540 mm	1
3.....	AA198001	Front Rail	L=540 mm	1
4.....	AH198001	Hardware Kits Package	.....	1

### Комплект крепежа параллельного упора станка JWBS-14DS

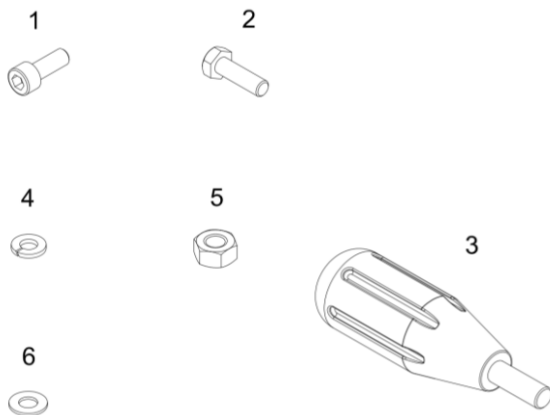

Index No	Part No	Description	Size	Qty
1.....	TS-1503041	Socket Head Cap Screw	M6x16	2
2.....	TS-1482041	Hex Cap Screw	M6x20	2
3.....	198013	Handle	M8	1
4.....	TS-2361061	Lock Washer	M6	2
5.....	TS-1540061	Nut	M8	1
6.....	TS-1550061	Flat Washer	M8x13x1.0t	2


## Взрыв-схема открытой подставки станка JWBS-14DS

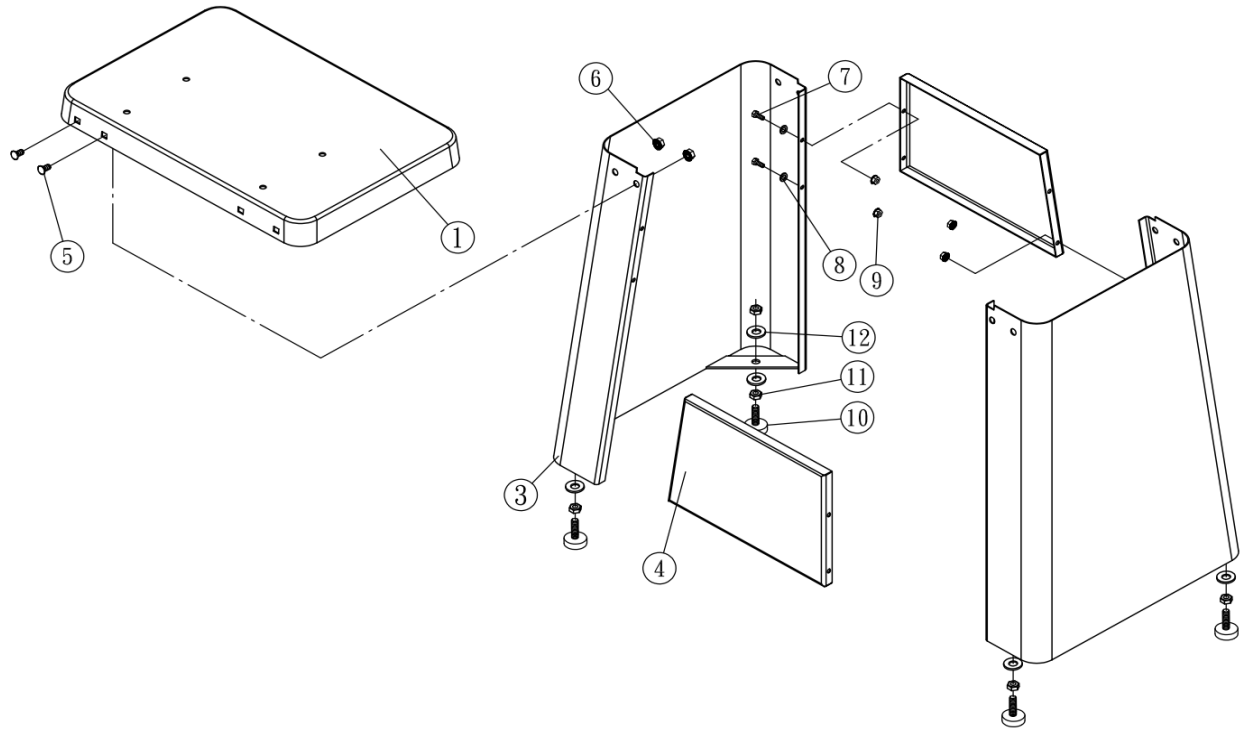

## Детализировка открытой подставки станка JWBS-14DS

Index No	Part No	Description	Size	Qty
1.....	100193.....	Stand Top.....		1
3.....	100144.....	Stand Side.....		2
4.....	100164.....	Stand Brace .....		2
5.....	SC089400.....	Carriage Bolt .....	M8x16.....	8
6.....	NF081300.....	Hex Nut w/Flange.....	M8 .....	8
7.....	TS-1482031 .....	Hex Cap Screw .....	M6x16.....	8
8.....	TS-1550041 .....	Flat Washer.....	M6xØ13.....	8
9.....	NF061000.....	Hex Nut w/Flange.....	M6 .....	8
10.....	172112.....	Stand Foot.....		4
11.....	TS-0570031 .....	Hex Nut .....	3/8"x16UNC .....	8
12.....	TS-1550071 .....	Flat Washer.....	M10xØ20.....	8

## Взрыв-схема высокого упора 10000236

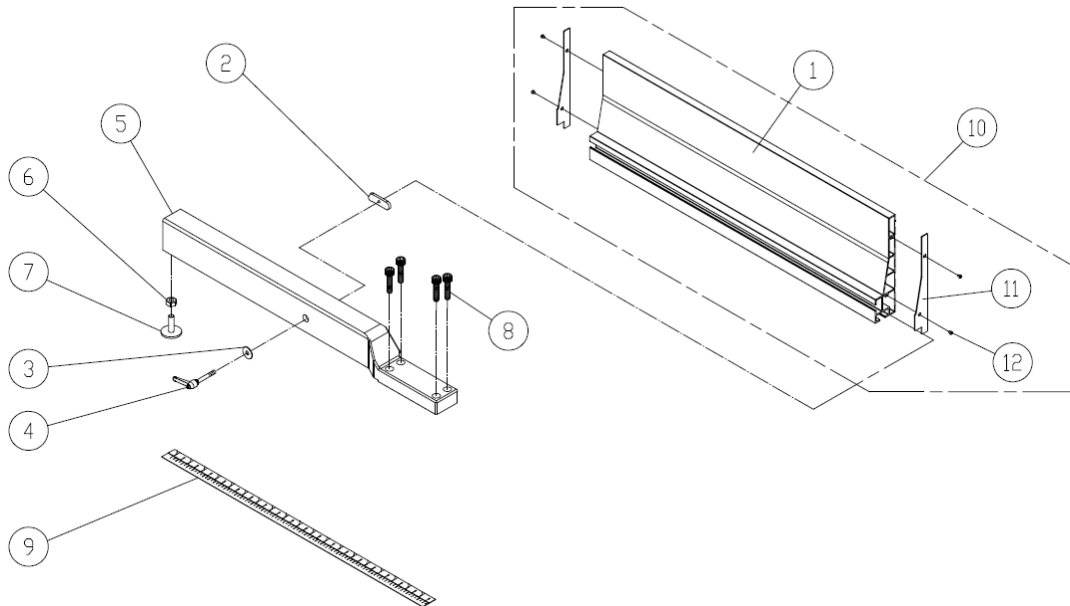

## Детализировка высокого упора 10000236

Index No	Part No	Description	Size	Qty
.....	10000236	High Fence Set (#1 thru 12)	.....	.....
1	198071	Aluminum Fence Plate	152x505 mm	1
2	200527	Lock Bar		1
3	WF083010	Flat Washer	M8*φ30*t1.0	1
4	198074	Rotary Handle Screw	M8X44	1
5	198076T	Fence Body (Casting Iron, black)	L=505mm	1
6	TS-1540041	Hex Nut	M6x12	1
7	198012	Adjust Screw	M6x20	1
8	TS-1503061	Socket Head Cap Screw	M6x25	4
9	LM001036	Scale Sticker	475 mm	1
10	AC198071	Resaw Fence Plate	152x505 mm	1
11	198181	Fence Side Piece	148x22x1 mm	2
12	ST039300	Tapping Screw	3.5X12	4



## Подключение к электросети

